

# FTP-1516 FASTstart Guide



---

## What is included?

- (1) Fiber tap w/ mounting bracket (for use with RMC-2 , RMC 12-2 or RMC-3, RMC 12-3)
  - (1) Download Card/Faststart Guide (tells where to download more product information)
- 

Fiber taps allow you to make a copy of network traffic as it travels between two network devices. These highly reliable, non-powered devices are the perfect solution to collect and capture network traffic for application analysis.

The FTP-1516 taps a 40G LR4 link and sends copies of the traffic out the 8 10G LR ports. The separation of traffic is based on wavelength.

**Installation** Follow the wiring diagrams shown below. Fiber taps are directional, and use specific inputs and outputs for TX and RX to work properly. Make sure to clean all connectors with compressed air and clean patch cable connectors prior to installation.

**Typical Insertion loss ratios** Network ports: 3.5 dB Monitor ports: 5.0 dB

Find out more. Visit  
[www.datacomsystems.com](http://www.datacomsystems.com)

**For More information**

**Customer Service** is available from our website: [www.datacomsystems.com](http://www.datacomsystems.com) or by calling +1 315 463 9541